

BEFORE YOU BEGIN



- Turn off water supply to head without cartridge if it must be left unattended for an extended period of time.
- Protect against freezing to prevent cracking of the filter and water leakage

CARTRIDGE REPLACEMENT



1. Relieve pressure by turning off water supply to the filter and dispensing water from the tap.
2. (a) Twist cartridge away from the locked position to the unlock position, and (b) remove cartridge (Image 1).
3. (c) Line up arrow on replacement cartridge with the unlocked position on head and firmly push cartridge into head and (d) turn to locked position (Image 2).
4. Turn on water and check for leaks. If leaks are found, see Troubleshooting section below.

NOTE: A water cartridge may contain carbon fines (very fine black powder). This will be released during your initial flushing.

5. Flush water through filter for fifteen minutes to remove carbon fines. Systems:
6. Check for leaks again before leaving installation.

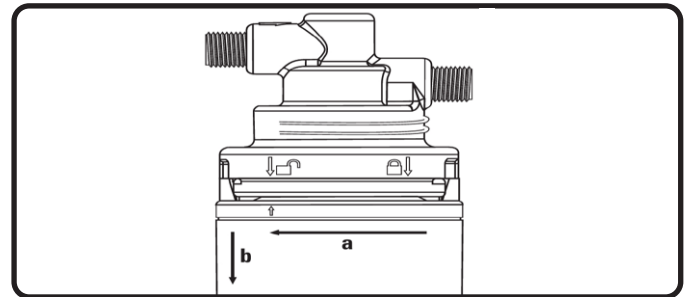


Image 1


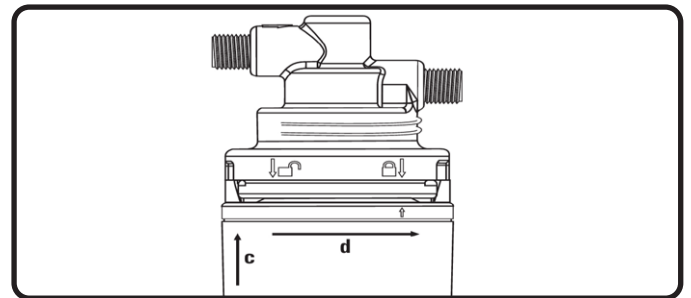


Image 2



Zoomed View

TROUBLESHOOTING

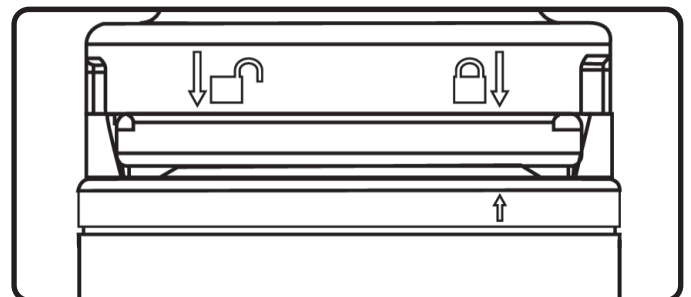

If you notice any leaks, check where this is coming from and then follow the instructions below:

System is leaking between the head and cartridge

1. Turn off the water supply to the filter and dispense water from tap.
2. Remove cartridge and inspect o-rings to make sure they are in place and clean.
3. Install cartridge and turn on water supply, if it still leaks, contact Technical Support at 0800 368 9302

System is leaking from the fittings

1. Relieve pressure by turning off water supply to the filter opening until water and airflow stops.