

BEFORE YOU BEGIN



- Shut off the water supply to the location where the unit is to be installed.
- Clear the location of any hazards, i.e. electrical.

EQUIPMENT REQUIRED



- Replacement cartridge(s)
- Cleaning solution & cloth
- Silicone based lubricant
- Housing bowl spanner
- Bucket/bowl

STEP BY STEP INSTRUCTIONS




1. Place the bucket under the system to catch any spilled water.
2. Depress the red pressure release valve if present, or open upstream outlet to release the build up of pressure in the system.
3. Use the spanner to loosen the bowl(s), follow the arrow moulded on spanner handle.
4. Continue to unscrew the bowl(s) by hand.
5. Empty the contents of the bowl into the bucket.
6. Remove the O-ring(s).
7. Make up a cleaning solution (typically warm soapy water), following the concentration instructions detailed on the solution.
8. Clean bowl(s) and head(s) thoroughly.
9. Dispose of cleaning solution in the appropriate manner and replace with clean water.
10. Rinse bowl(s) and head(s) thoroughly with clean water.
11. Wipe O-ring(s) clean and check for any nicks or damage. If not damaged lightly lubricate using silicone grease. If damaged, a replacement O-ring will be required.
12. Reseat the O-ring(s) in to bowls.
13. Unwrap the replacement cartridge(s) and place in the bowl(s).
14. Fit bowl(s) to relevant head(s) as required and hand tighten, follow the arrow moulded on spanner handle to tighten bowl.
15. Turn the water back on and depress the pressure release valve or open upstream outlet to purge any air where applicable.
16. Check for leaks around system.
17. Run the system until the filter(s) has been flushed thoroughly (approx. 5 litres).
18. Check for leaks before leaving the system in operation.
19. Make note of the changeout date on the label included.

Please note: Systems left unused for extended periods of time should be fully flushed to drain before using.



During installation and cartridge change-out, clean only using warm soapy water and a non-abrasive cloth or sponge.

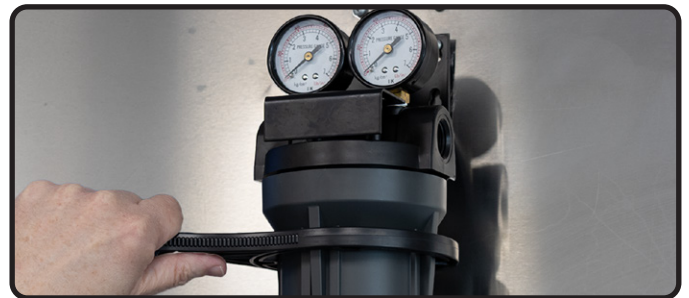

Images for demonstration purposes only, instructions are applicable for all filter cartridge types.