

BEFORE YOU BEGIN

Choose the option that applies to you:

First time installing the product? - Go to Section A: Full System/Cartridge Installation and read onto section B.

Replacing an existing cartridge? - Go to Section B: Follow the Cartridge Replacement instructions.

WHAT'S INCLUDED (WITH THE SYSTEM)

1. Complete filter system
2. Filter housing body
3. Twist-lock filter head
4. Filter housing cap
5. Saddle valve
6. Mini tap
7. Health or Taste Refillable Cartridge

A FULL SYSTEM INSTALLATION

1. Turn the main water supply off and open upstream outlet to relieve pressure.
2. Place the saddle valve(5) over the copper feed water pipe (ensure the correct side of the clamp adaptor is used based on the size of the pipework it is being connected to).
3. Tighten the screw at the bottom of the saddle valve(5) to clamp tightly onto the feed water pipe.
4. Screw the handle at the top of the saddle valve(5) clockwise to pierce a hole through the feed water pipe.
5. Mount complete filter system(1) in suitable location. (The bracket can be secured by 2 x M10x¾ screws)
6. Connect the tubing that is attached to the saddle valve(5), to the inlet of the filter housing system (with cartridge installed).
7. Install the mini tap(6) in the desired location.
8. Once fitted, connect the tubing that is attached to the mini tap(6), to the outlet of the filter housing system.
9. Turn the main water supply on.
10. Unscrew the handle on top of the saddle valve (5) to allow the water supply through.
11. Open the mini tap(6).
12. Purge air from the line and flush water until clear.



(Image 1)

CARTRIDGE INSTALLATION (A CONTINUED)

The following instructions assume that the housing system has been connected to pipework.

1. Remove the filter housing(2, 4) from the twist lock head(3) by turning anti-clockwise (this will stop the flow of water due to the built in shut-off-valve).
2. Unscrew the filter housing body(2) from the cap(4).
3. Push the cartridge into the mount in the filter housing cap(4).
4. Check the cartridge is tightly secured(7).
5. Screw the filter housing body(2) clockwise back onto the cap(4).
6. Twist the complete filter housing(2, 4) clockwise into the twist lock filter head.
7. Open the water outlet downstream.
8. Purge air from the line and flush water until clear.

B CARTRIDGE REPLACEMENT

Use this section if your system is already installed and you are replacing the cartridge only

1. Remove the filter housing(2, 4) from the twist lock head by turning anti-clockwise (this will stop the flow of water due to the built in shut-off-valve).
2. Unscrew the filter housing body(2) from the cap(4) by turning anti-clockwise.
3. Remove the used cartridge from the mount of the cap(4).
4. Push the replacement cartridge into the mount in the filter cap(4).
5. Check the cartridge is tightly secured(7).
6. Screw the filter housing body(2) clockwise back onto the cap(4).
7. Twist the complete filter housing(2, 4) clockwise into the twist lock filter head.
8. Open the water outlet downstream.
9. Purge air from the line and flush water until clear.